


ProFormance™ Electronic Fluorescent Ballast Specifications

EP254HO/PS/MV

Ballast Type: Electronic Fluorescent
Starting Method: Programmed Start
Lamp Connection: Series
Input Voltage: 120-277V
Input Frequency: 50/60Hz


Lamp Type	# of Lamps	Volts	Rated Lamp Watts	Min. Start Temp (°F/°C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	THD %	Power Factor	B. E. F.	Wire Diag.
F54T5/HO	2	120	54	0/-18	1.00	120	1.00	<10	0.98	0.83	2-8
		277			0.43	117				0.85	
F54T5/HO	1	120	54	0/-18	0.52	62	1.02	<15	0.96	1.65	1-10
		277			0.23						
PLL55/2G11	2	120	55	0/-18	0.94	112	0.90	<10	0.98	0.80	2-6
		277			0.41						
PLL55/2G11	1	120	55	0/-18	0.49	58	0.92	<15	0.96	1.59	1-9
		277			0.22						
PLL50/2G11	2	120	50	0/-18	0.99	118	1.10	<10	0.98	0.93	2-6
		277			0.43						
PLL50/2G11	1	120	50	0/-18	0.51	61	1.12	<15	0.96	1.84	1-9
		277			0.23						
FC55T5/HO	2	120	55	0/-18	0.89	106	0.85	<10	0.98	0.80	2-13
		277			0.38	103				0.83	
FC55T5/HO	1	120	55	0/-18	0.46	55	0.87	<15	0.96	1.58	1-13
		277			0.21						

WIRING DIAGRAMS

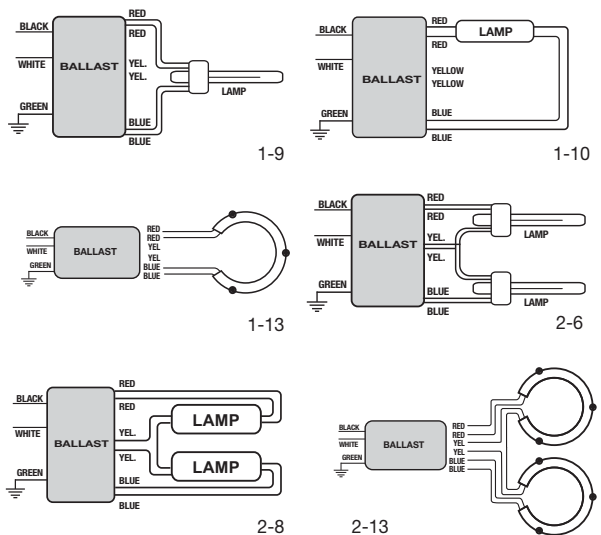

OCV: <300V

CASE DIAGRAM

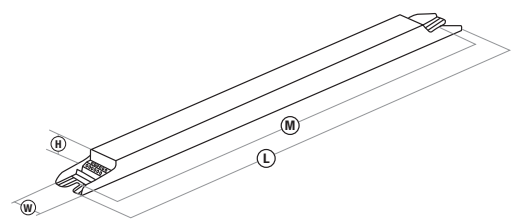

CASE DIMENSIONS

Overall (L)	Width (W)	Height (H)	Mounting (M)
16.90"	1.20"	1.00"	16.00"

This ballast uses Quick-Connect Technology

Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.