# Solar LED Round Bollard Light

## Lamp trying steps Manual

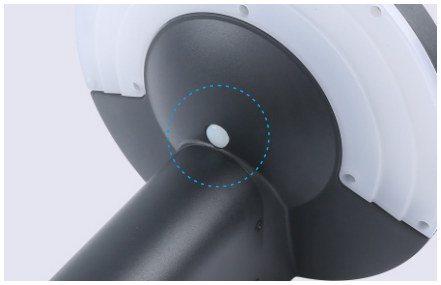



A white switch button at the bottom of the lamp holder

Turn on the switch on lamp

The lamp will be on after turning on switch

The lamp on means that lamp can be in normal installation

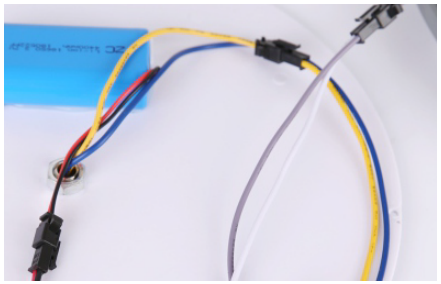

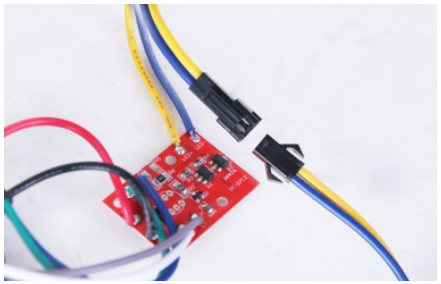

If lamp does not light as the above: Take apart the lamp cover

Check circuit, if connector is dropping out , light on, then install.

If there is no problem of the circuit, light is still not on,please pull up

the connector and plug again then connect observation light

If still not on, contact to custom service for treatment



## Installation steps




①First Put the lamp holder and the lamp tube Tighten 4 screws on the side

②Install the lamps and lanterns in the required position Insert the expansion screw into the base

③Attach the expansion screw on the base Just tighten the nut




④Put the lamp into the base Then tighten the screws on the side of the base to complete

⑤Press the switch light button by hand It will light up automatically when it gets dark

⑥Installation completion effect

## ★ Precautions

- Please pay attention to fixing lamps so as not to hurt people when the wind blows.
- In order not to affect the use of lights, clean up the dust and dirt on the surface of the solar panels every 3 months.
- Please check regularly whether the thread has come off or broken.
- Solar powered lamps contain batteries. Batteries are recyclables. Please do not litter.

