

# **Standalone Emergency BEM-Kit**

### **Features**

- Our BEM-Kit Series can be used on a large array of Lighting Fixtures for both T5 and T8 installations.
- The BEM-Kit, LED emergency back-up kit includes constant wattage emergency driver, battery, high efficacy LED module and LED charging indicator light.
- The emergency back-up kit provides emergency lighting solution in different lighting fixture/luminaire with input power source of 100-277VAC.
- BEM-Kit switches to emergency mode when power fails, the kit gives constant 760lm with 5000K LED module for a minimum of 90 minutes.






















## **Specifications**

Input Voltage:100-277vac 50/60hz	Output Voltage:6-8.4Vdc
Input Current:100ma Max	Output Power:6W Max
Input Power:5W Max	Charging Time: ≥24Hours
Emergency Time: ≥90 minutes	Output Type:LED class 2


### **Wiring Diagram**


### Case must be grounded

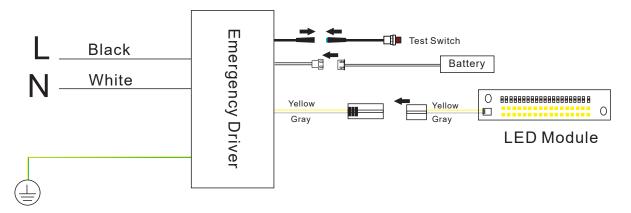

#### **Dimensions:**

Case- 5.55"x1.65"x0.87" (149mmx42mmx22mm)

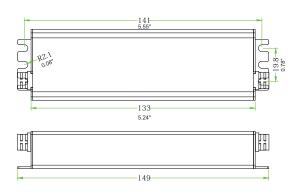

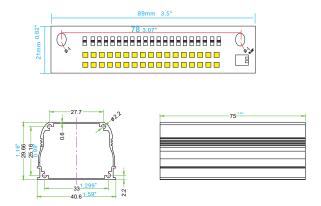



#### IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- •IMPORTANT: Customers are advised to charge emergency LED driver 24 hours every 6 months during storage.
- •IMPORTANT: Lighting fixture manufacturers, electricians, and end-users need to ensure product system compatibility test before using and final installation.
- •Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of LED Emergency Backup. Check for enclosed wiring and components.
- •Risk of fire or electric shock. This LED Emergency Backup installation requires knowledge of luminaire. electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- •Before installing, make certain the AC power to the fixture is off.
- •The electrical rating of this product is 100-277Vac.Installer must confirm that there is 100-277Vac to the fixture before installation.
- •To prevent electrical shock only mate unit connector after installation is complete and before the AC power to the fixture is back on.
- •This LED Emergency Backup unit requires an un-switched AC power source of 100-277Vac,50/60Hz The AC driver must be on the same branch circuit as the LED Emergency Backup unit.
- •Do not let power supply cords touch hot surfaces.
- •Do not mount near gas or electric heaters.
- •Do not use out doors
- •Do not connect battery pack connector until all other wiring is complete and AC power is on.
- •The emergency LED driver is for use with grounded, ULlisted LED luminaires, shall be enclosed by the LED luminaire and bonded to the grounding of LED luminaire.
- •Verify that all replacement lamp types marked on the installed luminaire are also identified as suitable for use with this emergency battery pack.
- •The battery pack is fixed by the screw and the indicator lamp is attached to the shell of the laminaria by3M tape
- Equipment should be mounted in locations and at heights where it is not be subjected to tampering by unauthorized personnel.
- •The use of accessory equipment not recommended by the manufacturer and may cause an unsafe condition.
- •Do not use this equipment for other than its intended use.
- •Use with grounded, UL Listed, dry or damp location rated fixtures.