LED UP LIGHT PARKING GARAGE CANOPY

Installation Guide

⚠ WARNING

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

— To prevent personal injury or product damage,only licensed electricians should install.
— To avoid electric shock or component damage,disconnect power before attempting installation or servicing.
— This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
— Disconnect product and allow cooling prior to servicing.
— Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
— To prevent product malfunction and/or electrical shock this product must be properly grounded.
— This luminaire is designed to operate in ambient temperatures ranging from -30°c to 40°c and to be horizontally mounted with the LEDs facing down.

Installation

1.Pendent with 3/4 inch Conduit

1.Loosen the screw on side of the light,removing the bracket from canopy light by pulling it out

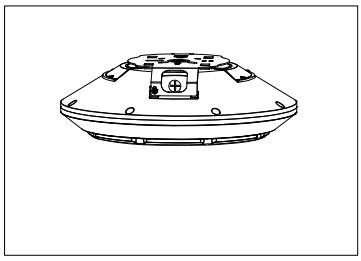

2.Connect the wires threaded from conduit and canopy,Black wire for Line,White for Neutral,Yellow Green for ground

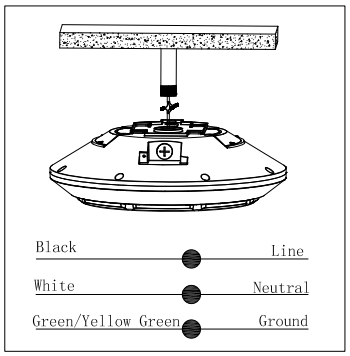

3.Screw the conduit into the hole on top of canopy light. Installation done.

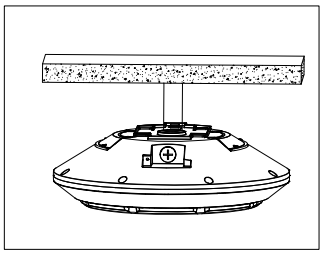

2.Surface Mounted with J-box

1.Loosen the screw on side of the light,removing the bracket from canopy light by pulling it out

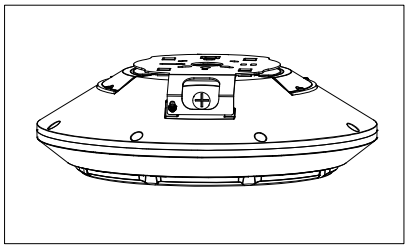

2.Fix the bracket on J-box ,and put the wire through the central hole for wiring

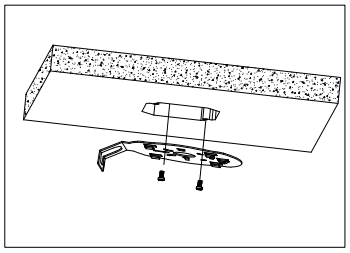

3.Attach the Canopy light with bracket by putting the ring on clips again. Connect the Black wire for line, white for Neutral,Yellow Green for Ground.

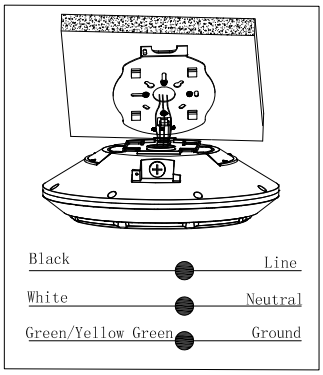

4.Slide the Canopy lights into bracket, and secure the screw on side of the light to prevent the light sliding out from the bracket. Installation done.

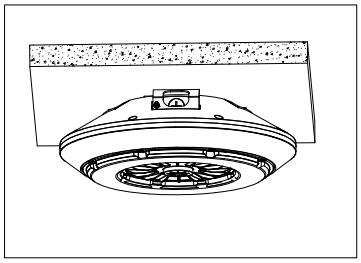

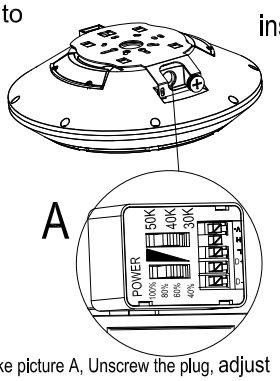

1）.Like picture A, Unscrew the plug, adjust wattage and cct as desired, and tighten the plug .

CCT & Wattage Adjustable installation instructions

