

Emergency LED Driver BLD-FM04E-600400

Features:

- Meet most of safety standards for lighting
- Standard CSA C22.2 NO.141、UL924
- Internal lithium battery
- Battery protections: over charge protection、over discharge protection、short circuit protection
- Indicator shows a variety working modes
- The batteries meet 500 cycles of standard charge and discharge

Specifications:

Output Power 2W,3W,4W **Emergency Time** 1.5H Universal Input Voltage 100-277Vac, 50/60Hz AC Input Current 100mA max. AC Input Power Rating 5.0W max. **Output Current and Voltage** 30-400mA 10-60Vdc **Full Warranty** 5 Years **Test Switch Indicator Light** Illuminated Test Switch. indicator Light Battery Li-ion battery-3.7V/2500mAh **Battery Charging Current** 250mA max. Charging Time ≥24Hours **Temperature Rating** (Ambient) Li-ion 0°C to +50°C (32°F to 120°F)

Dimensions:

Case- 5.5"x1.37"x0.86" (140mmx35mmx22mm)






Operation:

AC Operation:

AC power is present, The LED load from the LED driver is normal power supply, AC LED driver output current can not exceed 50W or 1A, the emergency driver is charging in a standby mode, The green LED light on to indicate that it is charging.

Emergency operation:


When the AC power goes out, The emergency driver detects the AC power outage and automatically switch to the working emergency mode. The green LED light off. When the AC power is restored, the emergency driver backs to AC power working and starts re-charging, the green LED light on.

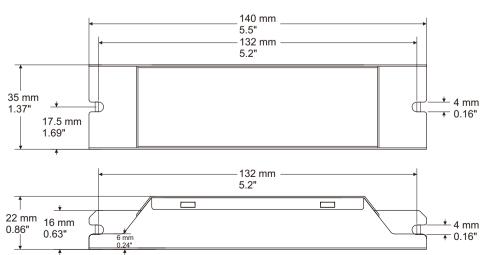



Emergency LED Driver BLD-FM04E-600400

Wiring Diagram:

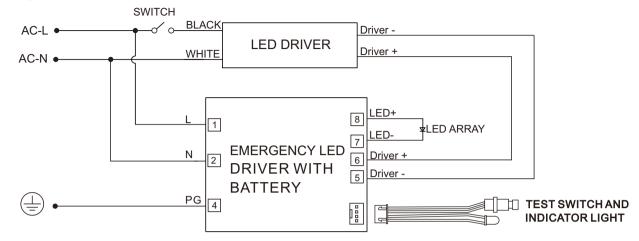

1.DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED. 2.TEST ACCESSORY LEADS-OBSERVE PROPER POLARITY WIRING.

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- Risk of fire or electric shock.Luminaire wiring and electrical parts may be damaged when drilling for installation of LED Emergency Backup. Check for enclosed wiring and components.
- Risk of fire or electric shock. This LED Emergency Backup installation requires knowledge of luminaires electrical systems. If not qualifed, do not attempt installation. Contact a qualifed electrician.
- Before installing, make certain the AC power to the fixture is off.
- The electrical rating of this product is 100-277Vac.Installer must confirm that there is 100-277Vac the fixture before installation.
- To prevent electrical shock, only mate unit connector after installation is complete and before the AC power to the fixture is back on.
- Do not use outdoors.
- This LED Emergency Backup unit requires an un-switched AC power source of 100-277Vac, 50/60Hz The AC driver must be on the same branch circuit as the LED Emergency Backup unit.
- Do not let power supply cords touch hot surfaces.
- Do not mount near gas or electric heaters.
- Do not join battery pack connecter until all other wiring is complete and AC power is on.
- The emergency LED driver is for use with grounded, ULIisted LED luminaires, shall be enclosed by the LED luminaire and bonded to the grounding of LED luminaire.
- Verify that all replacement lamp types marked on the installed luminaire are also identified as suitable for use with this emergency battery pack.
- The battery pack is fixed by the screw and the indicator lamp is attached to the shell of the luminaire by 3M tape
- Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not use this equipment for other than its intended use.
- Use with grounded, UL Listed, dry or damp location rated fixtures.